

### RESISTANCE THERMOMETER

#### Type XI-TOPT, XI-APTOPT

The sensor consists of an exchangeable measuring insert, outer protective tube (thermowell) with neck and aluminum connection head where mounting a temperature transmitter with 4-20 mA/HART® output signal is possible.

The measuring insert represents the replaceable element of the complete sensor which reduces time and costs of maintenance of the measuring apparatus installed in the object. Spring fixation of the measuring insert provides perfect pressure to the bottom of the protecting tube, reduces time of reaction to changes of temperature and increases accuracy of measurement as well as reduces natural vibration thus mechanical and electrical defects can be avoided.

### TECHNICAL DATA

#### Description

- intrinsically safe for mines MI, gas G and dust D atmospheres
- single and double RTD
- exchangeable mineral insulated measuring insert
- connection head types: XE-DANA (G1); XE-DANAW (G2); XE-DAND (G5); XE-DANDW (G6); XE-BE (E1); XE-BED (E2); IP65; ATEX II 2 GD (see technical information)
- flange DN20, DN25 with raised face acc. to PN-ISO 7005-1\*
- cable gland ATEX I MI, II GD, IP65; (cable dia. 5..10mm)\*
- output signal: RTD or 4-20mA (option)

#### Design temperature range

-200 .. +550°C

#### Sensing element

Ix or 2xPt100 acc. to EN 60751 class A, B

#### Thermowell type „T”

Material	stainless steel 1.4541*
Diameter D [mm]	Ø10, Ø11, Ø12, Ø15 or other*
Length L [mm]	160, 250, 400 or other*

#### Temperature transmitter (option)

PR5333D, PR5335D (HART®)  
FlexTop2202, FlexTop2212,  
FlexTop2222 (HART®)

Flange	ØW [mm]	ØH [mm]	ØZ [mm]
DN 20	58	75	105
DN 25	68	85	115
DN 32	78	100	140
DN 40	88	110	150
DN 50	102	125	165

#### ATEX Marking:


- CE I MI Ex ia I Ma
- CE II 1/2 G Ex ia IIC T... Ga/Gb
- CE II 1/2 D Ex ia IIC T... Da/Db

#### EAC Ex Marking:


- PO Ex ia I Ma X
- 0Ex ia IIC T...Ga X
- 0Ex ia IIC T...Da X

#### Remarks

\* other parameters on request

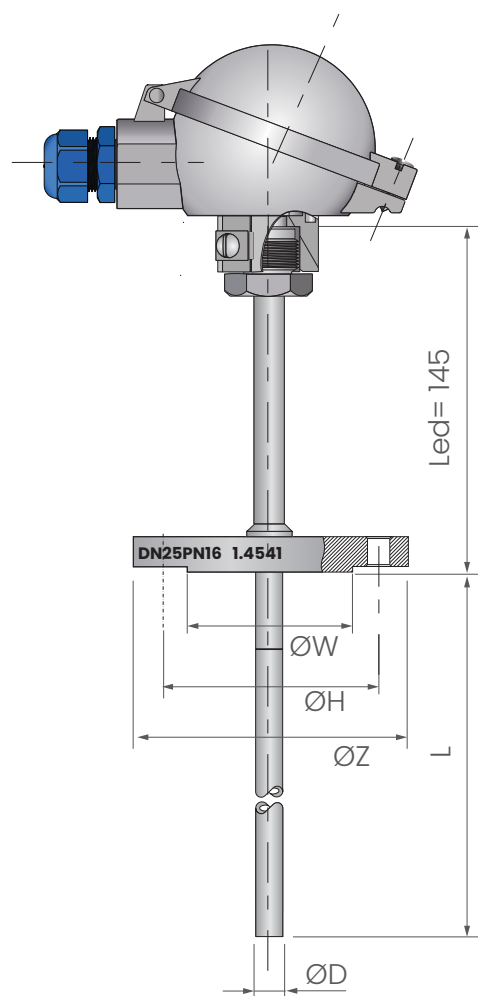

#### Connection head (variants)

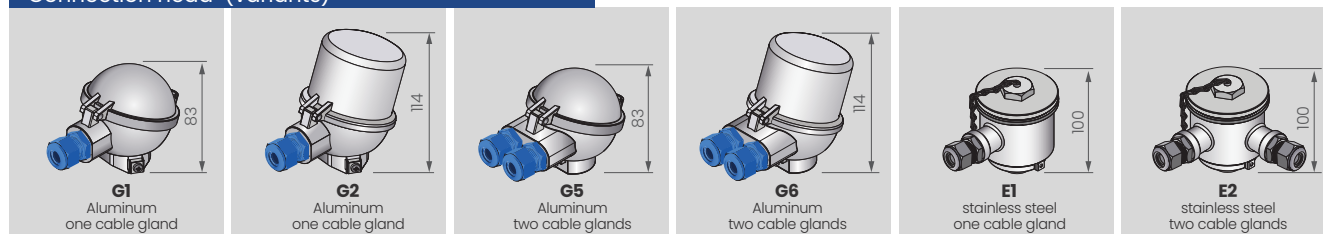

Temperature transmitter can be mounted inside a connection head of the sensor. There are two mounting options: directly on the measuring insert or in a high cap of the head. Advantage of the second solution is an easy replacement of the standard insert with a terminal block without need to dismantle the transmitter, which significantly reduces a time and cost of servicing the sensor and protects the connecting wires from damage. At the customer's request, it is possible to mount two transmitters. Temperature transmitter should be protected from temperatures over +85°C.



## ORDERING CODE

Temperature sensor		XI -	1	2	TOPT-	3	4	5	6	7	8	9	10	11
without transmitter:	without mark													
with transmitter:	AP													
with two transmitters:	2AP													
single:	without mark													
double:	2													
connection head type:	G1, G2, G 5, G6 , E1 , E2													
length L [mm]:	160, 250, 400 or other*													
diameter D [mm]:	10, 11, 12, 15 or other*													
flange type:	DN20, DN25 or other*													
RTD class:	A, B													
connection line	2, 3, 4 wire for 1xPt100; 2, 3wire for 2xPt100													
measuring range for transmitter output 4-20 mA	(...)°C													
transmitter type	see specification													
diameter of supply cable (for cable other than)	5.10mm (...)													

**EXAMPLE** Temperature sensor XI-TOPT-G1-400-12-DN25-A-4

3 4 5 6 7 8

Temperature sensor XI-APTOPT-G2-250-12-DN20-A-3-(0-150)°C-PR5333D

1 3 4 5 6 7 8 9 10