Temperature sensors for Hazardous Areas

INTRINSICALLY SAFE TEMPERATURE SENSORS



THERMOCOUPLE Type XI-TT..P, XI-APTT..P

The sensor consists of an exchangeable measuring insert, outer protective tube (thermowell) and aluminum connection head where mounting a temperature transmitter with 4-20 mA/HART® output signal is possible.

The measuring insert represents the replaceable element of the complete sensor which reduces time and costs of maintenance of the measuring apparatus installed in the object. Spring fixation of the measuring insert provides perfect pressure to the bottom of the protecting tube, reduces time of reaction to changes of temperature and increases accuracy of measurement as well as reduces natural vibration thus mechanical and electrical defects can be avoided.

TECHNICAL DATA

Description

•intrinsically safe for mines Ml, gas G and dust D atmospheres •single and double TC

- exchangeable mineral insulated measuring insert
 connection head types: XE-DANA (G1); XE-DANAW (G2);
 XE-DAND (G5); XE-DANDW (G6); XE-BE (E1); XE-BED (E2); IP65;
- ATEX II 2 GD (see technical information)
- •welded thermowell
- cable gland ATEX I M1, II GD, IP65; (cable dia. 5..10mm)* •output signal: TC or 4-20mA (option)

Design temperature range		
-40 +800°C (K)	for NiCr-NiAl (K)	K
-40 +700°C (J)	for Fe-CuNi (J)	J

Sensing element

1x or 2xNiCr-NiAI (K) 1x or 2xFe-CuNi (J)

acc. to EN 60584-2 class 1.2 acc. to EN 60584-2 class 1, 2

Thermowell

Material	steel 1.4541* or heat resistant 1.4841
Diameter D (mat. 1.4541)	Ø9, Ø10, Ø11, Ø12, Ø15 [mm] or other*
Diameter D (mat. 1.4841)	Ø15 [mm]
Length L [mm]	500, 710, 1000, 1400, 2000 or other*


Temperature transmitter (option)


PR5334B3B, PR5335D (HART®) FlexTop2212, FlexTop2222 (HART®)

Remarks

*other parameters on request **depends on thermowell material

ATEX Marking:	EAC Ex Marking:
🗲 😔 I MI Ex ia I Ma	PO Ex ia I Ma X
€ 🗟 1/2 G Ex ia C T Ga/Gb	0Ex ia IIC TGa X
€ 😔 II 1/2 D Ex ia IIIC T Da/Db	0Ex ia IIIC TDa X

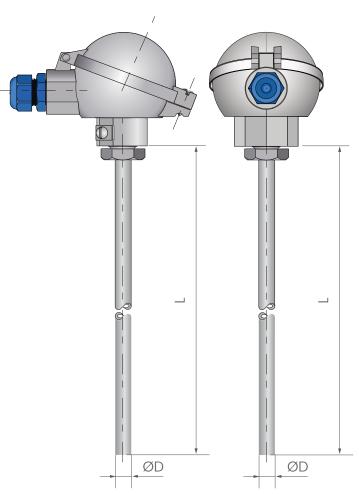

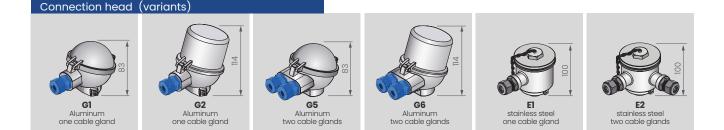




Temperature sensors for Hazardous Areas

INTRINSICALLY SAFE TEMPERATURE SENSORS

Catalogue | Edition 2023

Temperature transmitter can be mounted inside a connection head of the sensor. There are two mounting options: directly on the measuring insert or in a high cap of the head. Advantage of the second solution is an easy replacement of the standard insert with a terminal block without need to dismantle the transmitter, which significantly reduces a time and cost of servicing the sensor and protects the connecting wires from damage. At the customer's request, it is possible to mount two transmitters. Temperature transmitter should be protected from temperatures over +85°C.

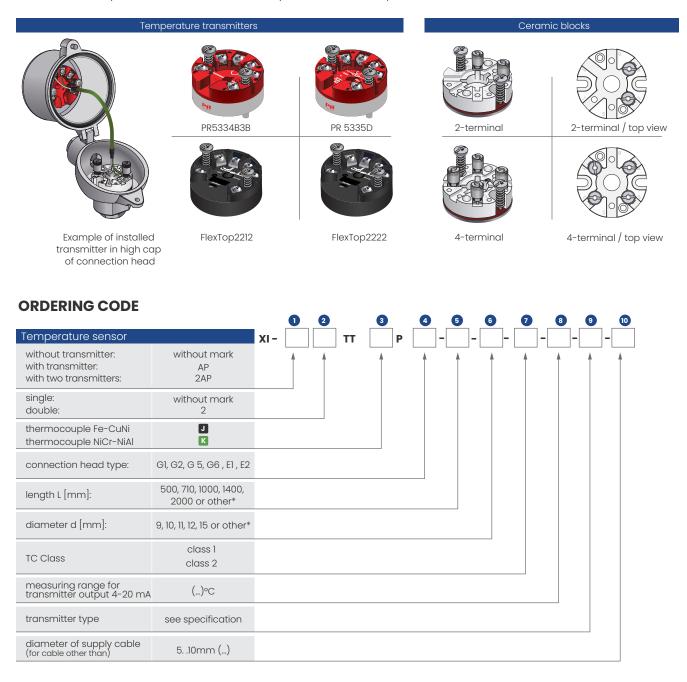

EXAMPLE

Temperature sensor XI-TTKP-G1-710-12-1



Temperature sensor XI-APTTKP-G2-1000-14-1-(0-600)°C-PR5334B3B 6 6 7 4

3

2

8

9