Temperature sensors for Hazardous Areas

INTRINSICALLY SAFE TEMPERATURE SENSORS



Catalogue | Edition 2023

RESISTANCE THERMOMETER

Type XI-TOPSW(T/G), XI-APTOPSW(T/G)

The sensor consists of an exchangeable measuring insert, drilled thermowell, neck and aluminum connection head where mounting a temperature transmitter with 4-20 mA/HART® output signal is possible.

The measuring insert represents the replaceable element of the complete sensor which reduces time and costs of maintenance of the measuring apparatus installed in the object. Spring fixation of the measuring insert provides perfect pressure to the bottom of the protecting tube, reduces time of reaction to changes of temperature and increases accuracy of measurement as well as reduces natural vibration thus mechanical and electrical defects can be avoided.

TECHNICAL DATA

Description

- •intrinsically safe for mines M1, gas G and dust D atmospheres
- *single and double RTD
- •exchangeable mineral insulated measuring insert
- connection head types: XE-DANA (G1); XE-DANAW (G2);
 XE-DAND (G5); XE-DANDW (G6); XE-BE (E1); XE-BED (E2); IP65;
 ATEX II 2 GD (see technical information)
- solid bored thermowell with flange or thread*
- •cable gland ATEX I M1, II GD, IP65; (cable dia. 5..10mm)*
- •output signal: RTD or 4-20mA (option)

Design temperature range

-200 .. +550°C

Sensing element	
lx or 2xPt100	acc. to EN 60751 class A, B

Thermowell type "SW'

Material	stainless steel 1.4541*
Flange DN20, DN25 with raised face acc. to	PN-ISO 7005-1 - Type SWT
Process thread	Type SWG


Temperature transmitter (option)

PR5333D, PR5335D (HART®) FlexTop2202, FlexTop2212, FlexTop2222 (HART®)

Remarks

* other parameters on request

ATEX Marking:	EAC Ex Marking:
CE IM1 Ex ia IMa	PO Ex ia I Ma X
C€ ■ 11/2 G Ex ia 11 C T Ga/Gb	0Ex ia IIC TGa X
C€ II 1/2 D Ex ia IIIC T Da/Db	0Ex ia IIIC TDa X

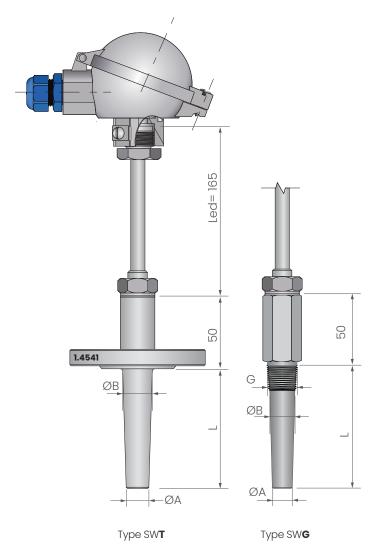

Connection head (variants)
















Temperature sensors for Hazardous Areas

INTRINSICALLY SAFE TEMPERATURE SENSORS

Catalogue | Edition 2023

Temperature transmitter can be mounted inside a connection head of the sensor. There are two mounting options: directly on the measuring insert or in a high cap of the head. Advantage of the second solution is an easy replacement of the standard insert with a terminal block without need to dismantle the transmitter, which significantly reduces a time and cost of servicing the sensor and protects the connecting wires from damage. At the customer's request, it is possible to mount two transmitters. Temperature transmitter should be protected from temperatures over +85°C.

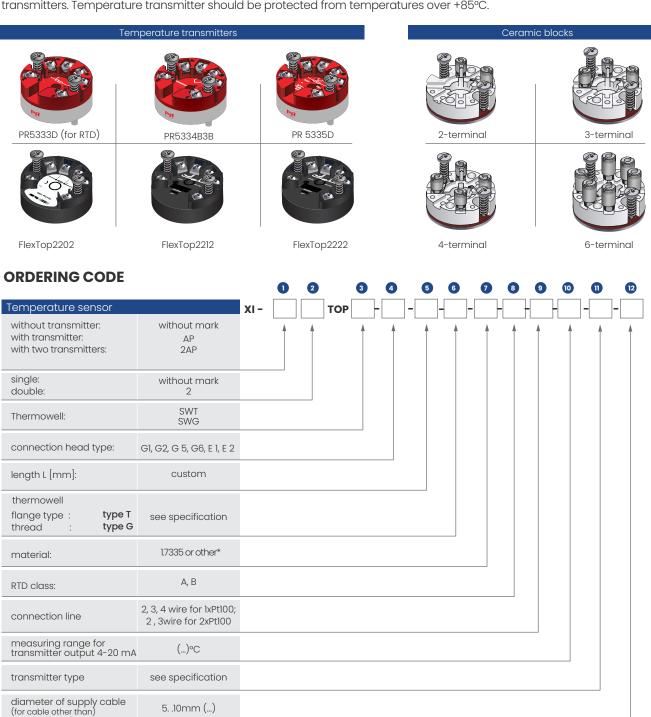

EXAMPLE Temperature sensor XI-TOPSWG-G1-500-1/2NPT-1.4541-A-3 **3 4 5 6 7 8**

0

Temperature sensor XI-APTOPSWT-G2-400-DN25-1.4571-A-3-(0-200)°C-PR5333D