### **Temperature sensors for Hazardous Areas**

INTRINSICALLY SAFE TEMPERATURE SENSORS



## THERMOCOUPLE Type XI-TT..SW, XI-APTT..SW

The sensor consists of an exchangeable measuring insert, drilled thermowell, neck and aluminum connection head where mounting a temperature transmitter with 4-20 mA/HART® output signal is possible.

The measuring insert represents the replaceable element of the complete sensor which reduces time and costs of maintenance of the measuring apparatus installed in the object. Spring fixation of the measuring insert provides perfect pressure to the bottom of the protecting tube, reduces time of reaction to changes of temperature and increases accuracy of measurement as well as reduces natural vibration thus mechanical and electrical defects can be avoided.

### **TECHNICAL DATA**

### Description

• intrinsically safe for mines MI, gas G and dust D atmospheres • single and double TC

• exchangeable mineral insulated measuring insert

connection head types: XE-DANA (G1); XE-DANAW (G2);
 XE-DAND (G5); XE-DANDW (G6); XE-BE (E1); XE-BED (E2); IP65;

- ATEX II 2 GD (see technical information)
- •thermowell for weld-in, to high pressures
- cable gland ATEX I M1, II GD, IP65; (cable dia. 5..10mm)\*
- •output signal: TC or 4-20mA (option)

Design temperature range		
-40 +800°C (K)	for NiCr-NiAl (K)	K
-40 +700°C (J)	for Fe-CuNi (J)	J

Sensing element	
1x or 2xNiCr-NiAl (K)	acc. to EN 60584-2 class 1, 2
1x or 2xFe-CuNi (J)	acc. to EN 60584-2 class 1, 2

Thermowell - standard DIN43772 form 4		
Material steel 15HM (1.7335) or other*		
Diameter D [mm]	Length L [mm]	
Ø18 mm – <b>SWI</b> ;	100/35, 140/65, 200/65	
Ø24 mm – <b>SW2</b>	140/65, 200/65, 260/125	


#### Temperature transmitter (option)


PR5334B3B, PR5335D (HART®) FlexTop2212, FlexTop2222 (HART®)

Remarks \*other parameters on request

ATEX Marking:	
🗲 🚭 I M1 Ex ia I Ma	
€ 🚭    1/2 G Ex ia    C T Ga/Gb	
€€ 🚱 II 1/2 D Ex ia IIIC T… Da/Db	

EAC EX Marking:	
PO Ex ia I Ma X	
0Ex ia IIC TGa X	
0Ex ia IIIC TDa X	

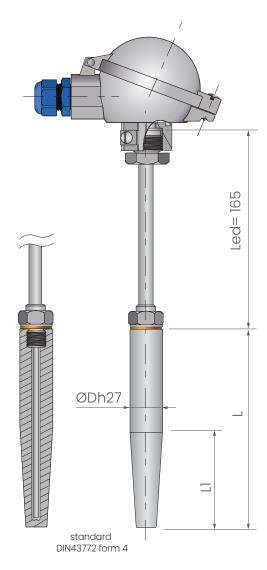

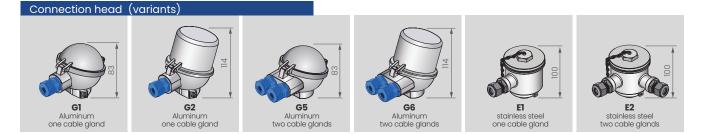




# **Temperature sensors for Hazardous Areas**

INTRINSICALLY SAFE TEMPERATURE SENSORS

Catalogue | Edition 2023

Temperature transmitter can be mounted inside a connection head of the sensor. There are two mounting options: directly on the measuring insert or in a high cap of the head. Advantage of the second solution is an easy replacement of the standard insert with a terminal block without need to dismantle the transmitter, which significantly reduces a time and cost of servicing the sensor and protects the connecting wires from damage. At the customer's request, it is possible to mount two transmitters. Temperature transmitter should be protected from temperatures over +85°C.

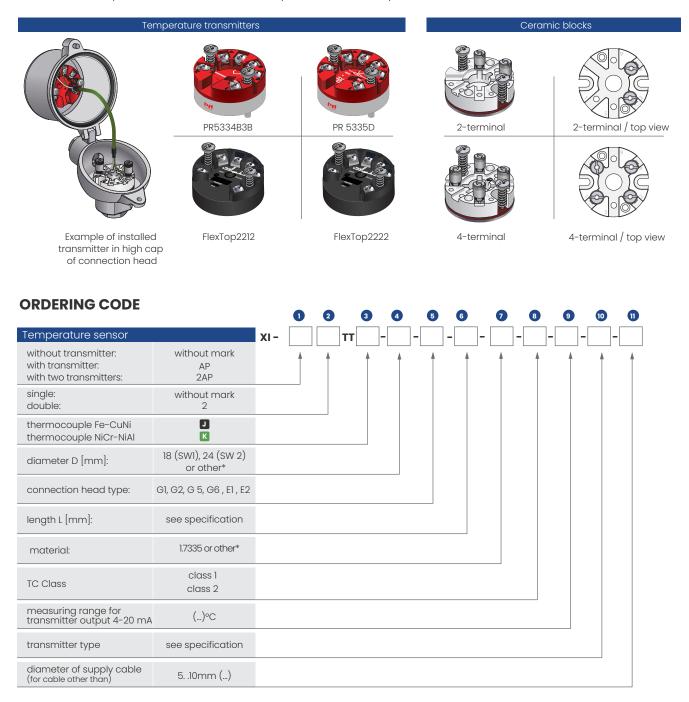

 EXAMPLE
 Temperature sensor
 XI-TTKSW1-G1-200-15HM-1

 3
 4
 5
 6
 7
 8

Temperature sensor XI-2AP2TTKSW2-G2-200-15HM-1-(0-400)°C-PR5334B3B

10